

# V5 Coin Chute/Slide: Changing the Vend Price

U.S. and CANADIAN MODELS  
25¢ and \$1.00 VEND PRICES

1. Remove slide return spring (#15).
2. Place coin(s) in slot(s) and push forward all the way.
3. Remove buffer (#26).
4. Turn coin chute upside down and install or remove the required number of blackout keys, (#24) or inserts, (#41). Add to lower, remove to increase vend price.
5. Reassemble buffer.
6. Pull slide back to original position and reassemble slide return spring.

CANADIAN 25¢ or \$1.00 VEND PRICES  
COIN CHUTE ID #27-3029 ONLY

7. Remove top housing (#3).
8. Remove or install sizing plate(s) (#39 or #40).
9. Reassemble top housing.

ALL CHUTES

10. Install correct decals (#9 and #13).

TO CHANGE 5¢ or 10¢ PRICING US. MODELS ONLY

1. Follow Steps 1, 2, 3, above.
2. Turn chute upside down and install or remove required number of blackout keys (#24) or inserts (#31 or #32).
3. Reassemble buffer and pull slide back.
4. Remove top housing (#3) and turn housing upside down.
5. Install correct coin sizing block (#33, #34, #35, or #36).
6. Reassemble top housing and return spring.
7. Install correct decals (#9 & #13).

## **GREENWALD INDUSTRIES**

212 Middlesex Avenue | Chester, CT 06412 USA | Tel: (860) 526-0800 | Fax: (860) 526-4205  
Toll-Free Tel: 1-800-221-0982 | Toll-Free Fax: 1-800-445-1340  
[www.greenwaldindustries.com](http://www.greenwaldindustries.com)

**United States & Canada Customer Service & Technical Assistance:**  
Monday–Friday, 8am to 5pm EST.

Contents, specifications and availability are subject to revisions serving the technical improvement.  
Not responsible for any typographical errors.

