 




- 1. Disconnect power to machine.
- 2. Open control console panel.
- Locate machine power supply transformer and disconnect output power connector.






5. Remove coin drop harness or remove coin drop jumper.

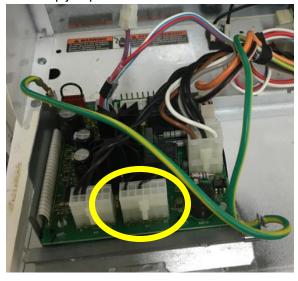

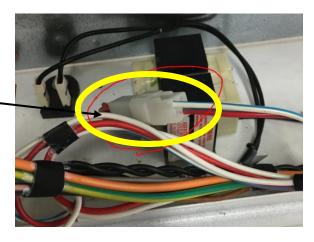





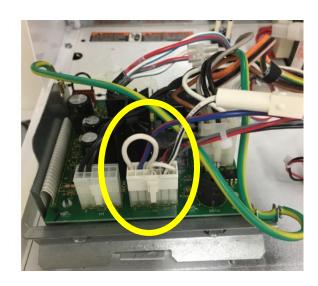




6. Install Greenwald pay device coin harness between either the jumper or the harness removed from step 5.

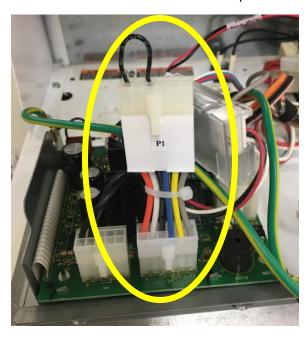

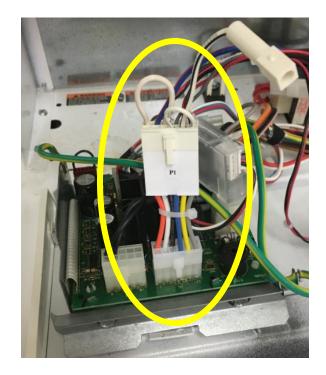


7. Connect Greenwald pay communication harness into machine.

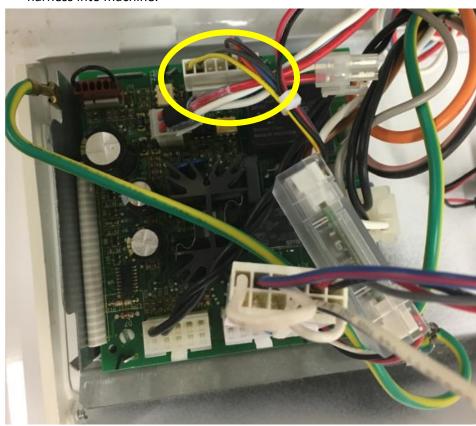




8. Make sure serial communication jumper is installed. Greenwald pay will not work without it. Previous coin operated machine will need to have this jumper installed.

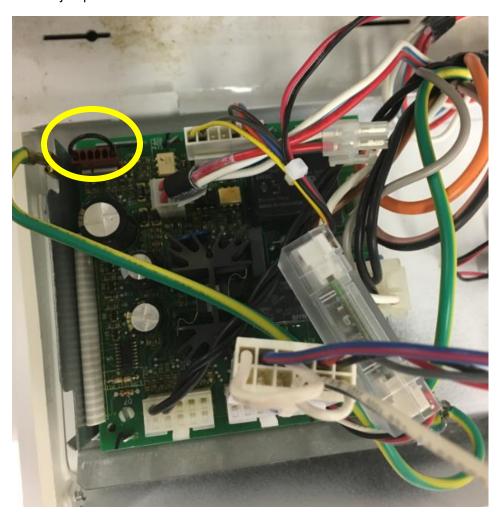



 Connect Greenwald pay device into Greenwald power conditioner and then into machine transformer from step 4 then secure the power conditioner down with some double-sided tape provided.

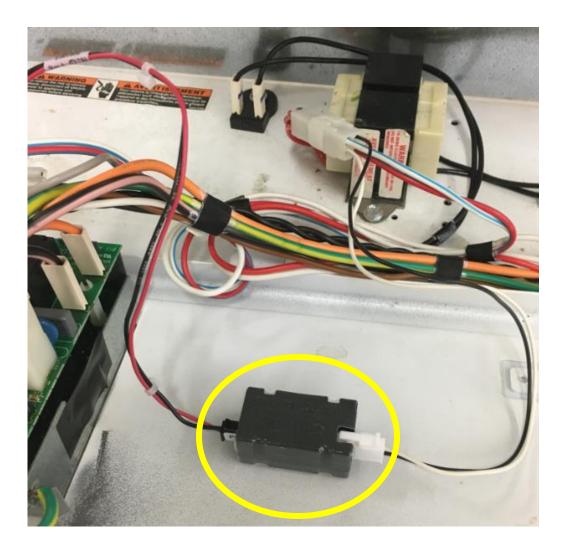

- Leave console panel open and repower the machine. The Greenwald Pay device should slow blink white. Meaning not configured.
- 11. Follow Greenwald pay device setup instructions located in pamphlet or www.greenwaldindustries.com/gpay-help