

# **G4 Coin Chute/Slide:**

## **Changing the Vend Price**

### **TO CHANGE 25¢ PRICING**

1. Remove slide return spring (#15).
2. Place coin(s) in slot(s) and push all the way forward.
3. Remove buffer (#28).
4. Turn coin chute upside down and install or remove the required number of blackout keys (#24) and (#32). Add to lower, remove to increase vend price.
5. Reassemble buffer.
6. Pull slide back to original position and reassemble slide return spring.
7. Install the appropriate pricing decals (#10) and (#13).

#### **GREENWALD INDUSTRIES**

212 Middlesex Avenue | Chester, CT 06412 USA | Tel: (860) 526-0800 | Fax: (860) 526-4205  
Toll-Free Tel: 1-800-221-0982 | Toll-Free Fax: 1-800-445-1340  
[www.greenwaldindustries.com](http://www.greenwaldindustries.com)

**United States & Canada Customer Service & Technical Assistance:**  
Monday–Friday, 8am to 5pm EST.

Contents, specifications and availability are subject to revisions serving the technical improvement.  
Not responsible for any typographical errors.

