
INSTALLATION DIAGRAM

The Greenwald Pay Plus device installs in-between the machine control panel and Heartland card reader

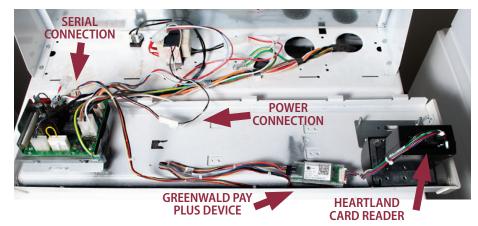

GREENWALD PAY PLUS DEVICE LED CODES

COLOR	ACTIVITY	SIGNIFICANCE
Off	Off	Device not connected to power
White	Slow Blink	Device not configured
Blue	Steady	Selected during configuration
Yellow	Slow Blink	Loading machine configuration
Green	Steady	Configured & ready
Blue	Slow Blink	Active with phone app
Green	Fast Blink	Active, Start not pressed
Green	Slow Blink	Busy, machine running
Red	Slow Blink	Machine Error
Red	Fast Blink	Machine Interface Error
Blue/Green	Slow Toggle	Firmware Loading
Red	Steady	Firmware Error


MACHINE ERROR CODES

ERROR CODE	SIGNIFICANCE	RESOLUTION
EC18 + EC19	No communication between reader and control board	Check dipswitch #3
		Check all wiring
		Check for proper setup (take note of Gpay LED colors)
EC11	Initialization error	Power down, power up and try again.
EC1A	Payment System initialization on Front End Control only system (aka 2019 setup on 2020 controller)	Change GMS machine configuration
EC05	Invalid data from reader	Check for correct machine type. Ensure the value in at least one of the programming options is not invalid and/or out of range.



Greenwald Pay Plus Installation Instructions MDC Machines with HEARTLAND-CR Card Readers

Kit #: 4104-007 INS. 2471-5 Rev A

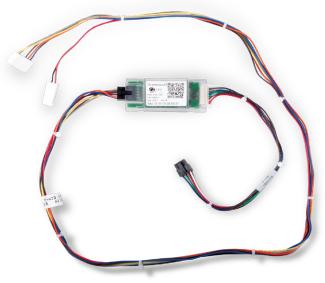

Tools Needed for Installation







Greenwald Industries

212 Middlesex Avenue | Chester, CT 06412 USA 800-221-0982 | www.greenwaldindustries.com



