## **Dryer Timers**

# Adjustable Time Settings



5900P Square Face Timer

**Greenwald Industries' 5900 Series Timers** offer easy to increase or decrease time settings on electrical appliances. Accumulation period feature is convenient to appliance user, since extended operation can be obtained without the need to deposit coins after each time period.

When ordering, please specify:

- Timing
- Voltage
- Number of coin(s) to start (1-4)
- Type of coinage

CREENWALD
a division of The Eastern Company

### Specification Details for QuarterMasters™ 5900 P Series

Series	Round Face	Square Face
Part Number: 1 Switch	59 - 3100 - 2	
Part Number: 2 Switches	59 - 3200 - 2	59 - 3200 - 15
Part Number: 3 Switches	59 - 3300 - 2	59 - 3300 - 15
Voltage <sup>†</sup>	110VAC or 220VAC, 50/60 Hz	110VAC or 220VAC, 50/60 Hz
Average Power Consumption	3 watts	3 watts
Mounting	Standard	Standard
Net Weight	1.7 lbs	1.7 lbs
Options: Token Foreign Currency* 24V AC† 2 Coin Start 3 Coin Start Time Accumulating Limiting	• • • • •	• • • • • • • •
Warranty	1 Year	1 Year

<sup>\*</sup>Contact factory for international currency.

Series

#### **Part Number Example** 3300 - 15 - 110V AC - 7.5 - 2 USA # of Coins / Type of Currency 3 Switches Square Face

Timing

give you the desired timing.


Voltage

#### **Timing Formula**

#### RPM divided by Pins equals Minutes

#### **Identifying On and Off Positions:**

In the OFF position, the **switch arm (A)** is fully depressed against the **switch** button (B). There is no conductivity between COM and NC. When a coin is deposited (1 coin to start), the switch arm is released and the internal contacts close. There is now conductivity between **COM** and **NC**, and the meter is **on**.

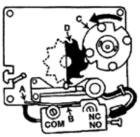

To turn the meter off, remove accumulated time:

First disconnect meter from the power source. Rotate the white nylon timing CAM (C) until both toothed ratchet wheels (D) are advanced. Now reconnect it to the power source. The meter (and the appliance) will run for a brief period of time (2 to 3 minutes with a 1/60 RPM motor) and then shut off. The unit is now ready for operation.

### Timing CAM HUB Up Line up notch to clear ratchet tooth Lift gently with narrow 1. Rotate the timing CAM by hand screwdriver blade until the 'V" notch lines up with Timing the tooth of the ratchet wheel. 2. Pry off the timing CAM, making sure that the "V" notch clears the ratchet tooth. 3. Replace it with the CAM that will

Systems

Made in the USA

Simple Instructions to Change Timing:

#### **GREENWALD INDUSTRIES**

212 Middlesex Avenue | Chester, CT 06412 USA | Tel: (860) 526-0800 | Fax: (860) 526-4205 Toll-Free Tel: 1-800-221-0982 | Toll-Free Fax: 1-800-445-1340 www.greenwaldindustries.com

#### United States & Canada Customer Service & Technical Assistance: Monday-Friday, 8am to 5pm EST.

Contents, specifications and availability are subject to revisions serving the technical improvement. Not responsible for any typographical errors.



Coin-Op Leader for Over 50 Years

Why Greenwald Industries Full Line of Laundry Vending Products: Coin, SmartCards, and Access Control